



Allow Room for Insertion/Removal

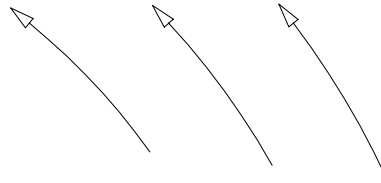


Standard Mount Position is Canted on 5°

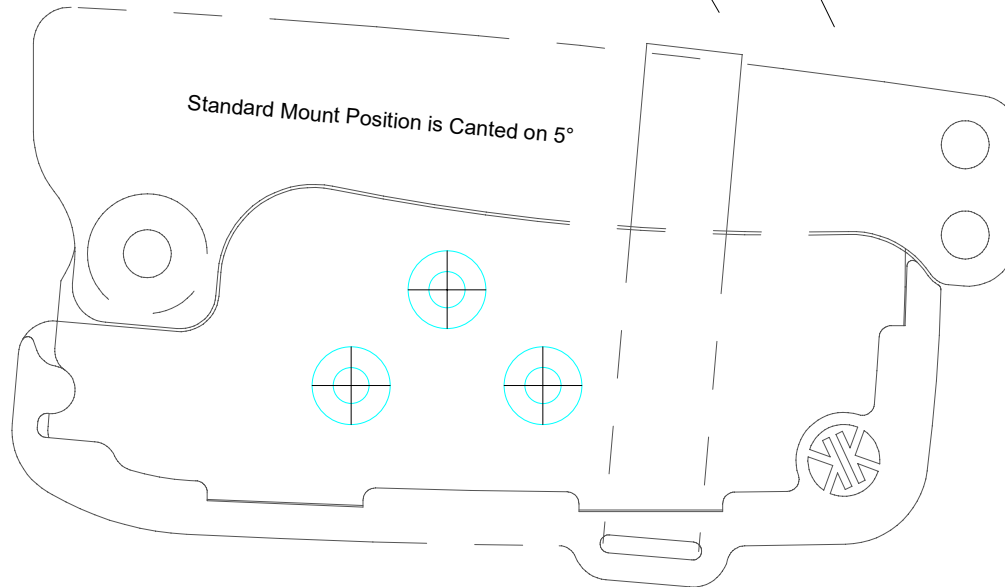

Mark and Drill these 3  
Mounting Holes,  
Using the Reference Lines  
for Leveling and Location

Screw Size:  
#8 Truss Head

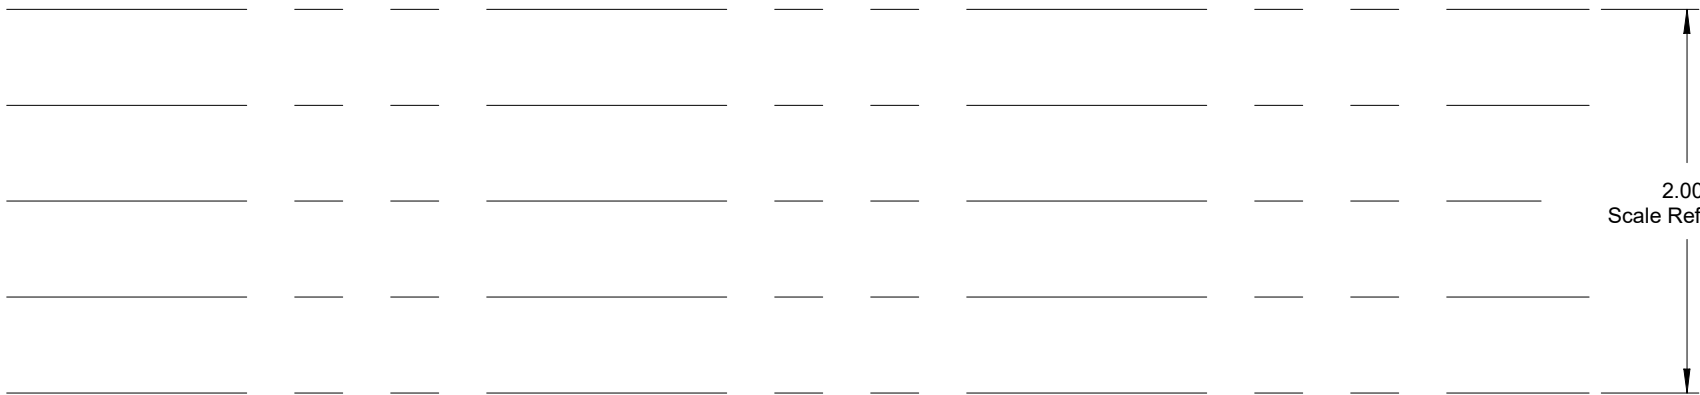

Model K05 Nomad: Panel Mounting Hole Template